


CRIMP BOTH ENDS OF THE
CLEAT SO THAT IT WILL NOT
SLIDE ON THE RAIN CAP

SLIP ON CLEAT TO HOLD
RAINCAP TOGETHER

TWO PIECE RAIN CAP
OVER JOINT IN THE PANS

CAULK UNDER
THE RAIN CAP

CUT THE BOTTOM OF THE
PAN AT THE DRAIN BEAM
AND FOLD THE PAN DOWN
INTO THE BEAM

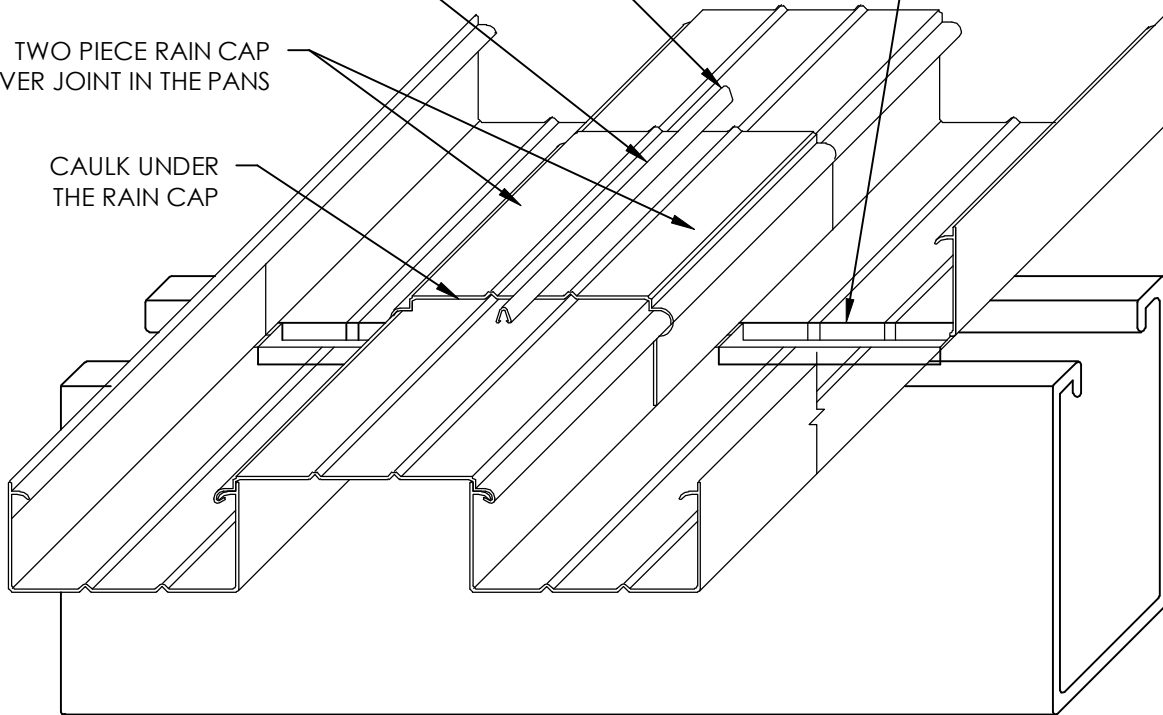

FOR FURTHER DESIGN ASSISTANCE
PLEASE CALL PERFECTION AT
1-800-238-7207
OR 407-671-6225



Perfection Architectural Systems, Inc

Service, Quality, Reliability.

2310 Mercator Drive, Orlando, FL 32807
407.671.6225 / 800.238.7207 Fax: 407.671.8252
www.perfectionarch.com

2pc. RAIN CAP/DRAIN
DETAIL