


CRIMP BOTH ENDS OF THE  
CLEAT SO THAT IT WILL NOT  
SLIDE ON THE RAIN CAP

SLIP ON CLEAT TO HOLD  
RAINCAP TOGETHER

TWO PIECE RAIN CAP  
OVER JOINT IN THE PANS

CAULK UNDER  
THE RAIN CAP

CUT THE BOTTOM OF THE  
PAN AT THE DRAIN BEAM  
AND FOLD THE PAN DOWN  
INTO THE BEAM

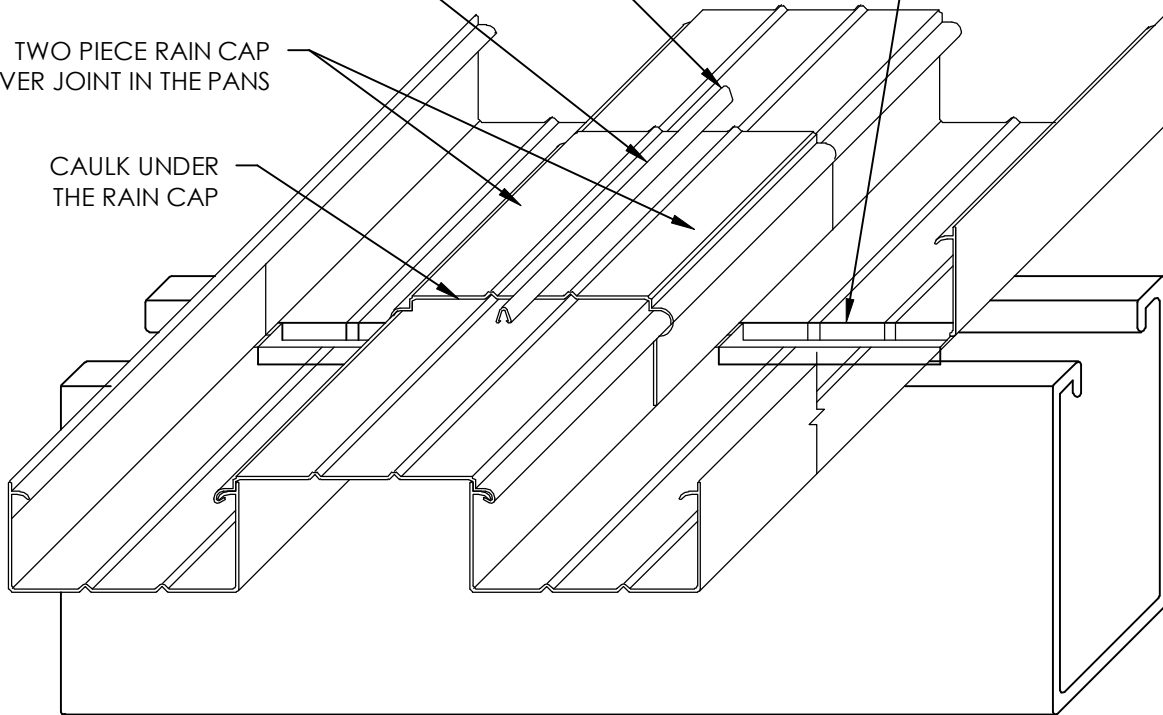

FOR FURTHER DESIGN ASSISTANCE  
PLEASE CALL PERFECTION AT  
1-800-238-7207  
OR 407-671-6225



**Perfection Architectural Systems, Inc**

*Service, Quality, Reliability.*

2310 Mercator Drive, Orlando, FL 32807  
407.671.6225 / 800.238.7207 Fax: 407.671.8252  
[www.perfectionarch.com](http://www.perfectionarch.com)

2pc. RAIN CAP/DRAIN  
DETAIL